

Thank you for choosing a GenerLok™ power cord.

Before using this power cord for the first time, please confirm that you have selected the correct length and connectors.

1. With your generator turned off attach the power cord to your generator and GenerLink™.
2. Confirm that the power cord correctly and securely connects to your generator.
3. Check that the cord will not be subject to damage, immersion or vehicular traffic in the selected location.



CAUTION

To avoid the risk of electric shock or fire, follow these instructions for proper use:

1. Before starting your generator disconnect all loads at your circuit breaker or fuse box and confirm that your power cord is securely connected. Apply load only after generator is running. Refer to your generator's operation manual for safe operations.
2. Fully extend cord before using.
3. Keep children and pets away.
4. Keep away from water.
5. Fully insert plug and twist lock in, when applicable.
6. Unplug cord from GenerLink™ and generator when not in use. Store in a clean dry place.
7. Inspect periodically.
8. Do not use damaged cord sets.
9. Use within the electrical rating marked on the cord set.
10. Your GenerLok™ cord set is intended for use solely to connect a portable generator to a GenerLink™ unit.

Generator Safety

To protect yourself, your family and your property read and follow the safety instructions contained in your generator's operations manual. For optimal performance and safety, always read the owners manual before operating any type of equipment.

Warranty

- Manufacturer expressly warrants this power cord to the original owner for a period of 1 year from date of shipment against defects in manufacturing. Manufacturer shall repair or replace at its discretion the non-conforming unit following receipt of the non-conforming unit(s) for its inspection. This limited warranty is in lieu of all other expressed warranties obligations or liabilities. Manufacturer limits the duration of any warranty implied by law, including but not limited to the implied warranties of merchantability and fitness for a particular purpose to one year from the date of shipment.
- Manufacturer will not repair or replace defects or damage caused by tampering, misuse, improper installation or servicing not performed by Manufacturer.
- Manufacturer is not liable for incidental, special or consequential damages
- The GenerLok™ power cord is intended for use solely to connect a properly sized portable generator to a GenerLink™ and is not warranted for other use.
- For warranty fulfillment contact GenerLink™ at 770-736-8232 or toll free at 800-886-3837.

Instructions for connecting the GenerLok™ power cord.

For Generator start-up procedures, please refer to the generator manufacturer owner's manual.

1. Turn off all the circuit breakers in your breaker panel.
2. Move your generator into position to be connected to GenerLink™. Using the GenerLok™ power cord, insert the four-blade plug on the connecting cord into the 20-amp, 30-amp or 50 amp, 120/240-volt outlet on the generator.


Do not attempt to connect your generator using a connection cord that is not fitted with GenerLok™. Do not attempt to connect to a three-blade generator outlet or one rated higher than 50-amps. (Refer to the GenerLink™ Operating Manual's Power Cord section for more details).

3. To plug the GenerLok™ power cord into GenerLink, align the inner notch with the front of the GenerLink receptacle. Insert the cord into connector, there will be a snapping sound when the connector locks in place. **Do not twist power cord.** (See Diagram 1)

Note: GenerLok™ cannot be connected successfully"

- If the connector does not lock in place (no snapping sound or removes from GenerLink with a slight pull on the power cord)

Diagram 3

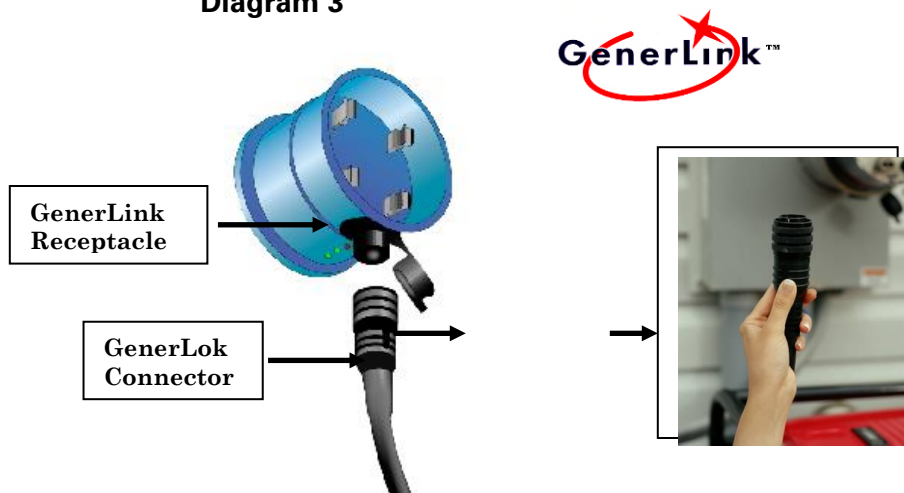

4. Turn off the idle setting (if present) on your generator. This will ensure that your generator will operate at the correct speed.
5. Review the generator starting procedures in the generator owner's manual and then start your generator.
6. Continue with the Start-Up Procedures listed in the GenerLink™ Operating Manual.